



FIG	ITEM	DESCRIPTION	P4DHX12F08001A
1	1	Right and Left Side Panel (2 Req'd)	026-42122-000
1	2	Rear Panel Baffle	026-39161-000
1	3	Rear Panel	026-42123-000
1	4	Blower Division Panel Assembly	026-42124-000
1	5	Base Panel Assembly	026-39363-000
1	6	Front Panel	026-42125-000
1	7	Blower Access Door	026-42126-000
*	7A	Door Handle	026-38694-000
*	7B	Logo Bezel	026-35695-000
*	7C	Logo Label	026-42127-000
1	8	End Panel	026-39366-000
1	9	Heat Exchanger Assembly	026-38798-000
1	10	Firepot Retainer Bracket	026-39133-000
1	11	Replacement Combustion Chamber	026-42128-000
1	12	Oil Burner Mounting Plate Assembly	026-42129-000
1	13	Flue Pipe Connecting Flange	026-39367-000
1	14	Junction Box Cover	026-37404-000
1	15	Pouch Gasket	028-13907-000
1	16	Flue Pipe Gasket (2 Req'd)	028-13909-000
1	17	Clean-out Pipe Cover (2 Req'd)	026-37397-000
*	17A	Cleanout Cap Gasket (2 Req'd)	026-42468-000
1	18	Clean-out Gasket Retainer (2 Req'd)	028-14738-000
*	18A	Clean-out Gasket (2 Req'd)	028-14737-000
1	19	Filter Frame	026-38719-000
1	20	Filter Frame End Support	026-38720-000
1	21	Air Filter - 16 x 25 x 1 (Permanent)	026-35676-001
1	22	Junction Box	026-37403-000
1	23	Channel Wire Retainer (2 Req'd)	026-42130-000
1	24	Limit Control (180 Deg. F)	026-37366-000
1	25	Wire Harness, Control	026-30268-000
1	26	Harness, Direct Drive Blower	026-42131-000
1	27	Fan Timer Control	026-37407-000
1	28	Draft Regulator (5")	026-35659-002
1	29	Oil Burner	026-42132-000
*	29A	Burner Motor	026-38662-000
*	29B	Clean-cut Oil Pump	026-38738-000
*	29C	Solid State Ignitor	026-37418-000
*	29D	Primary Combustion Control	026-38664-000
*	29E	Flame Retention Head	026-37434-000
*	29F	Nozzle (0.65/80 Deg. A)	026-42133-000
1	30	Blower Assembly, Complete Direct Drive	026-42134-000
*	30A	Blower Housing and Wheel	026-35652-000
*	30B	Blower Wheel	026-38705-000
*	30C	Blower Motor	024-27845-000
*	30D	Motor Mounting Band	026-38677-000
*	30E	Motor Mount Arms (3 Req'd)	026-38679-000
*	30F	Run Capacitor, Motor	024-31999-000
*	30G	Capacitor Strap	026-38680-000
*	30H	Blower Slide Rail (2 Req'd)	026-39371-000

&lt;

**NOTE:** \*Not ShownNew replacement parts shown in **bold** face type at the first printing of parts list dated 3/08.

Major components and suggested stocking items are shown with shaded item number.

“&lt;” Across from row indicates a change in that row.

--- Not applicable to specified model.

FIG	ITEM	DESCRIPTION	P4DHX12F08001A
1	31	Auxillary Limit (140 Deg. F) (2 Req'd)	025-37363-000
1	32	Transformer	025-37364-000
1	33	Control Panel	026-42135-000
1	34	Wire Harness, J-Box to Control	026-42136-000
1	35	Supply Wire Harness	026-37412-000
1	36	Limit Cover, Left	026-42137-000
1	37	Limit Cover, Right	026-42138-000
*	38	Low Fire Kit	026-42139-000
*	38A	Low Firing Rate Baffle	026-42140-000
*	38B	Nozzle (.50/80 Deg. A)	026-37419-000
*	39	Vestibule Kit	1VP2280
*	39A	Door Handle	026-38694-000
*	39B	Base Panel	026-42141-000
*	39C	Top Panel	026-38772-000
*	39D	Door Panel	026-42142-000
*	39E	Left Side Panel	026-42143-000
*	39F	Right Side Panel	026-42144-000

**NOTE:** \*Not Shown

New replacement parts shown in **bold** face type at the first printing of parts list dated 3/08.

Major components and suggested stocking items are shown with shaded item number.

"<" Across from row indicates a change in that row.

--- Not applicable to specified model.





FIG	ITEM	DESCRIPTION	P4DHX16F12001A
2	1A	Right Side Panel	026-42145-000
2	1B	Left Side Panel	026-42146-000
2	2	Side Panel Heat Exchanger Support (2 Req'd)	026-39144-000
2	3	Rear Panel	026-42147-000
2	4	Assembly, Blower Division Panel	026-42148-000
2	5	Base Heat Exchanger Support	026-39145-000
2	6	Front Panel	026-42149-000
2	7	Blower Access Door	026-42150-000
*	7A	Door Handle	026-38694-000
*	7B	Logo Bezel	026-35695-000
*	7C	Logo Label	026-42127-000
2	8	End Panel	026-42151-000
2	9	Heat Exchanger Assembly	026-42152-000
2	10	Firepot Retainer Bracket	026-39133-000
2	11	Replacement Combustion Chamber	028-13916-000
2	12	Oil Burner Mounting Plate Assembly	026-42129-000
*	12A	Inspection Door Gasket	026-42153-000
2	13	Flue Connector	026-42154-000
2	14	Pouch Gasket (2 Req'd)	028-13907-000
2	15	Flue Pipe Gasket (2 Req'd)	028-13909-000
2	16	Clean-out Pipe Cover (2 Req'd)	026-37397-000
*	16A	Clean-out Cap Gasket (2 Req'd)	026-42468-000
2	17	Clean-out Gasket Retainer (2 Req'd)	028-14738-000
*	17A	Clean -out Gasket (2 Req'd)	028-14737-000
2	18	Filter Frame	026-38719-000
2	19	Filter Frame End Support	026-38720-000
2	20	Air Filter - 20 x 20 x 1 (Permanent)	026-35676-000
2	21	Junction Box	026-37403-000
2	22	Channel Wire Retainer (2 Req'd)	026-42130-000
2	23	Limit Control 150 Deg F.	026-37362-000
2	24	Limit Control 16 Deg F.	026-39355-000
2	25	Wire Harness J-Box to Control	026-42155-000
2	26	Wire Harness Blower Direct Drive	026-42156-000
2	27	Fan Timer Control	026-37407-000
2	28	Air Baffle	026-42157-000
2	29	Wire Harness Supply	026-37412-000
2	30	Limit Cover, Left	026-42137-000
2	31	Limit Cover, Right	026-42138-000
2	32	Draft Regulator, 6"	026-35659-001
2	33	Transformer	026-37364-001
2	34	Control Panel	026-42158-000
2	35	Wire Harness Burner to Timer Board	026-42159-000
2	36	Wire Harness Transformer to Timer Board	026-42160-000

**NOTE:** \*Not Shown

New replacement parts shown in **bold** face type at the first printing of parts list dated 3/08.

Major components and suggested stocking items are shown with shaded item number.

"<" Across from row indicates a change in that row.

--- Not applicable to specified model.



FIG	ITEM	DESCRIPTION	P4DHX16F12001A
2	37	Oil Burner (AF76XN)	026-42161-000
*	37A	Burner Motor	026-38662-000
*	37B	Cleanout Pump	026-38738-000
*	37C	Solid State Ignitor	026-37418-000
*	37D	Primary Combustion Control	026-38664-000
*	37E	Air Tube Combination	026-35683-000
*	37F	Flame Retention Head (91 to 117,000 BTU)	026-37434-000
		Flame Retention Head (128,000 BTU)	026-39149-000
*	37G	Nozzle - 1.00/60 Deg A	026-38713-000
		Nozzle - 1.10/70 Deg A	026-38714-000
2	38	Blower Assembly Complete, Direct Drive	026-42162-000
*	38A	Blower Housing and Wheel	026-35652-000
*	38B	Blower Wheel	026-38706-000
*	38C	Blower Motor	024-27844-000
*	38D	Motor Mounting Band	026-38677-000
*	38E	Motor Mount Arms	026-35655-000
*	38F	Motor Run Capacitor	024-32001-001
*	37G	Blower Slide Rail	026-39371-000
2	39	Auxillary Limit 130 Deg F.	026-42163-000
2	40	Junction Box Cover	026-37404-000

**NOTE:** \*Not Shown

New replacement parts shown in **bold** face type at the first printing of parts list dated 3/08.

Major components and suggested stocking items are shown with shaded item number.

"<" Across from row indicates a change in that row.

--- Not applicable to specified model.



<b>ACCESSORIES</b>		
<b>MODEL</b>	<b>DESCRIPTION</b>	<b>USED ON</b>
1CB1312	Combustible Floor	12F08001
1CB1316	Sub Base	16F12001

**NOTES**

**TO ORDER AUTHORIZED FACTORY REPLACEMENT PARTS** - Contact your Source1 HVAC Parts Distributor or visit our website at [www.Source1Parts.com](http://www.Source1Parts.com) for a Distributor and Dealer listing.